
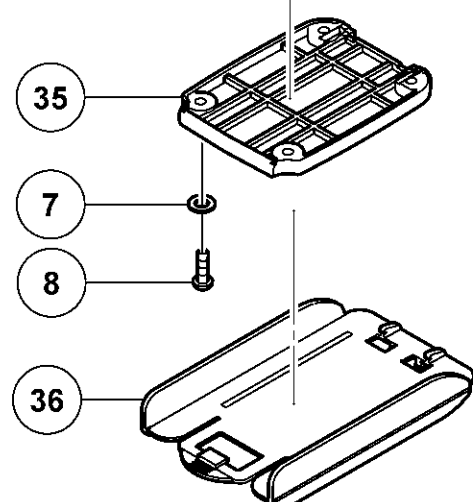
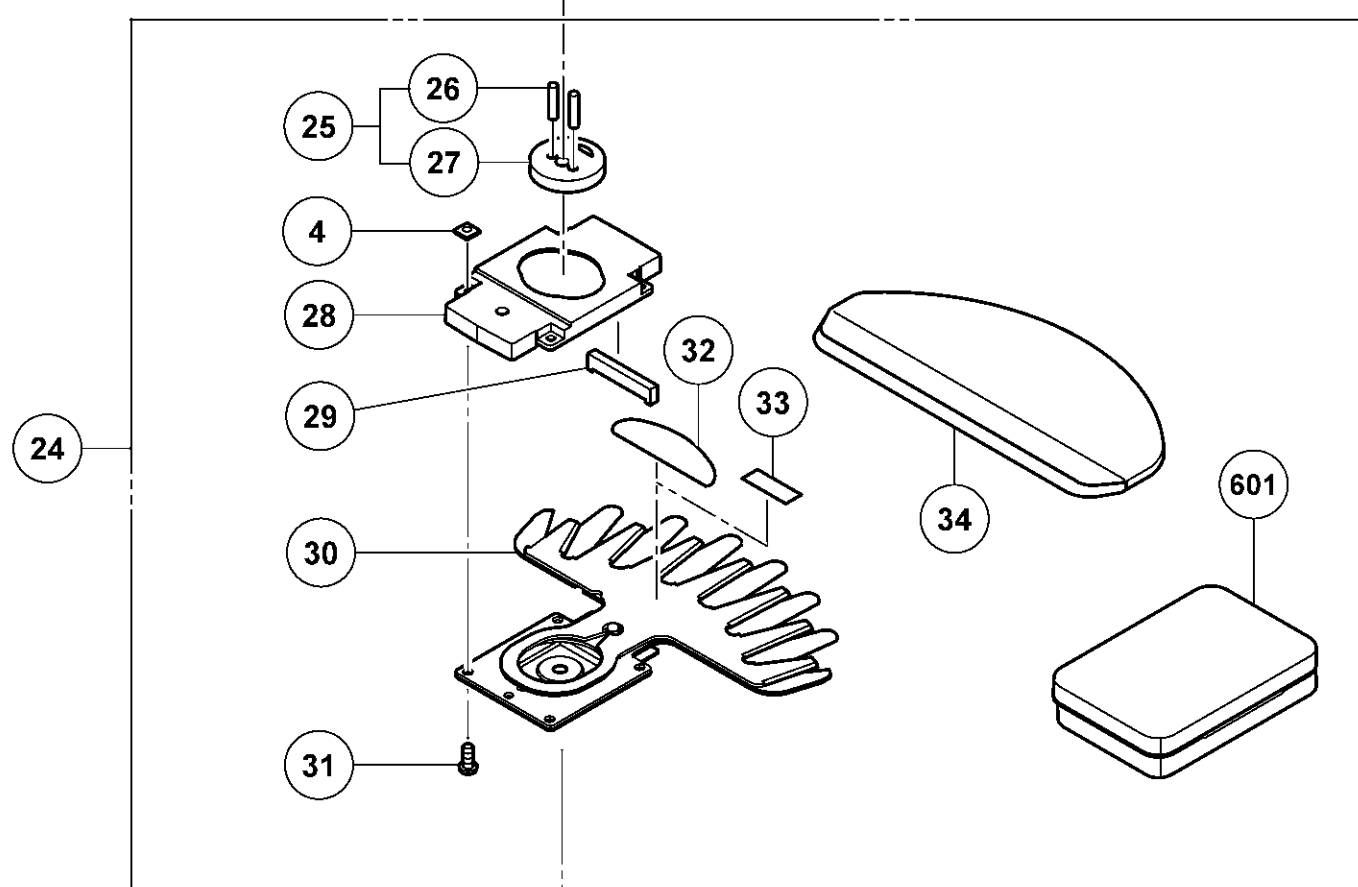
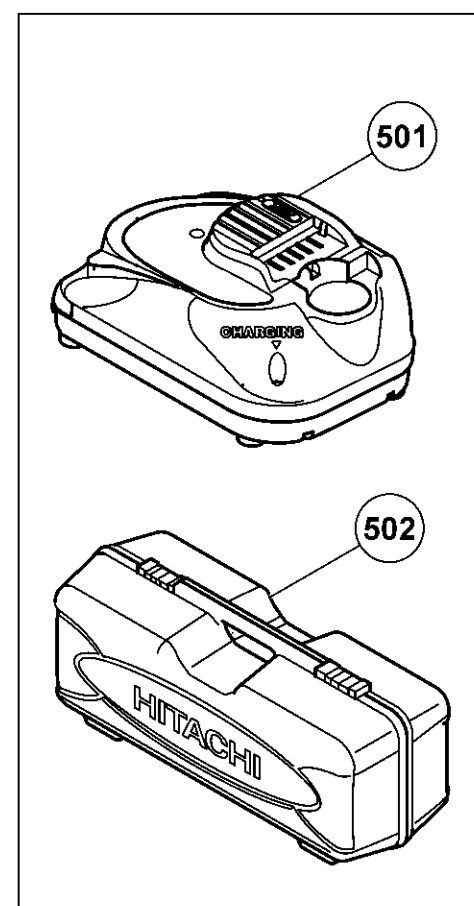


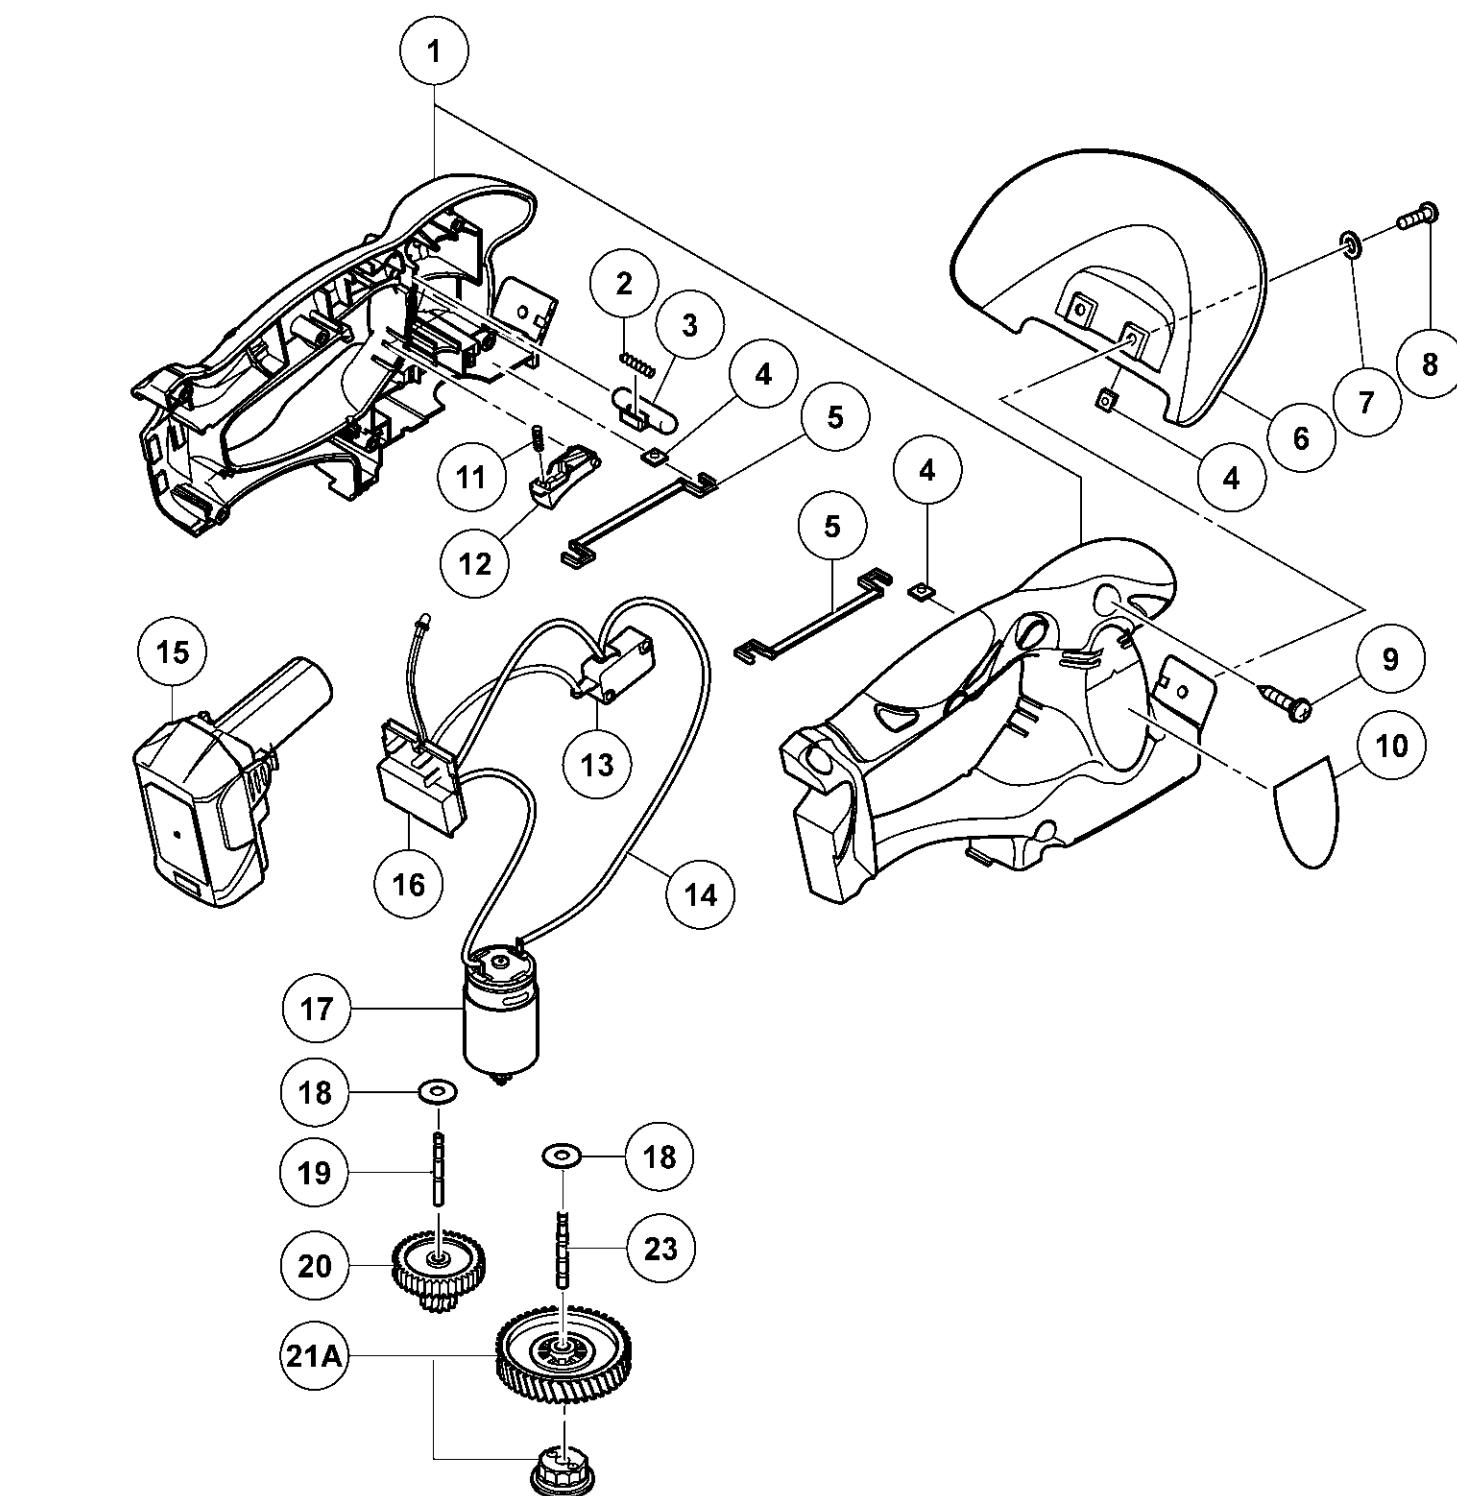

CORDLESS GRASS SHEAR CG 10DL

Item No.	Code No.	Description	No. used	Remarks
1	330882	HOUSING	1	
2	324306	SPRING (A)	1	
3	324298	LOCK-OFF BUTTON	1	
4	330056	NUT M4	10	
5	329837	NUT HOLDER	2	
6	330879	PROTECTOR	1	
7	949423	WASHER M4 (10 PCS.)	6	
8	949217	MACHINE SCREW M4X12 (10 PCS.)	6	
9	301653	TAPPING SCREW (W/FLANGE) D4X20 (BLACK)	6	
10		NAME PLATE	1	
11	324307	SPRING (B)	1	
12	324299	TRIGGER	1	
13	320786	SWITCH	1	
14	330058	INTERNAL WIRE	1	
*15	331067	BATTERY BCL 1015 (EUROPE,AUS,NZL)	1	
*15	331065	BATTERY BCL 1015 (USA,CAN)	1	
16	329839	CONTROLLER (C)	1	
17	330880	MOTOR DC 10.8V	1	
18	329835	WASHER D15	2	
19	329832	SHAFT (B)	1	
20	330055	FIRST GEAR	1	
21A	331755	FINAL GEAR SET	1	
23	329830	SHAFT (A)	1	
*24	330887	BLADE SET (CG)	1	INCLUD.4,25,28- 31,33,34,601
25	330886	CRANK CAM ASS'Y	1	INCLUD.26,27
26		PIN (B)	1	
27		CRANK CAM (B)	1	
28	331507	CRANK CASE	1	
29	331508	DUST FELT	1	
30		BLADE (CG)	1	
31	323211	MACHINE SCREW M4X8 (BLACK)	4	
32		LABEL (USA)	1	
33		LABEL (EURO)	1	
34	328030	BLADE COVER (170)	1	
35	330883	BOTTOM COVER	1	

Item No.	Code No.	Description	No. used	Remarks
36	328023	ADJUSTER	1	
		STANDARD ACCESSORIES		
501		CHARGER (MODEL UC 10SFL)	1	
502	330885	CASE	1	
		OPTIONAL ACCESSORIES		
601	330057	BLADE BOX	1	