


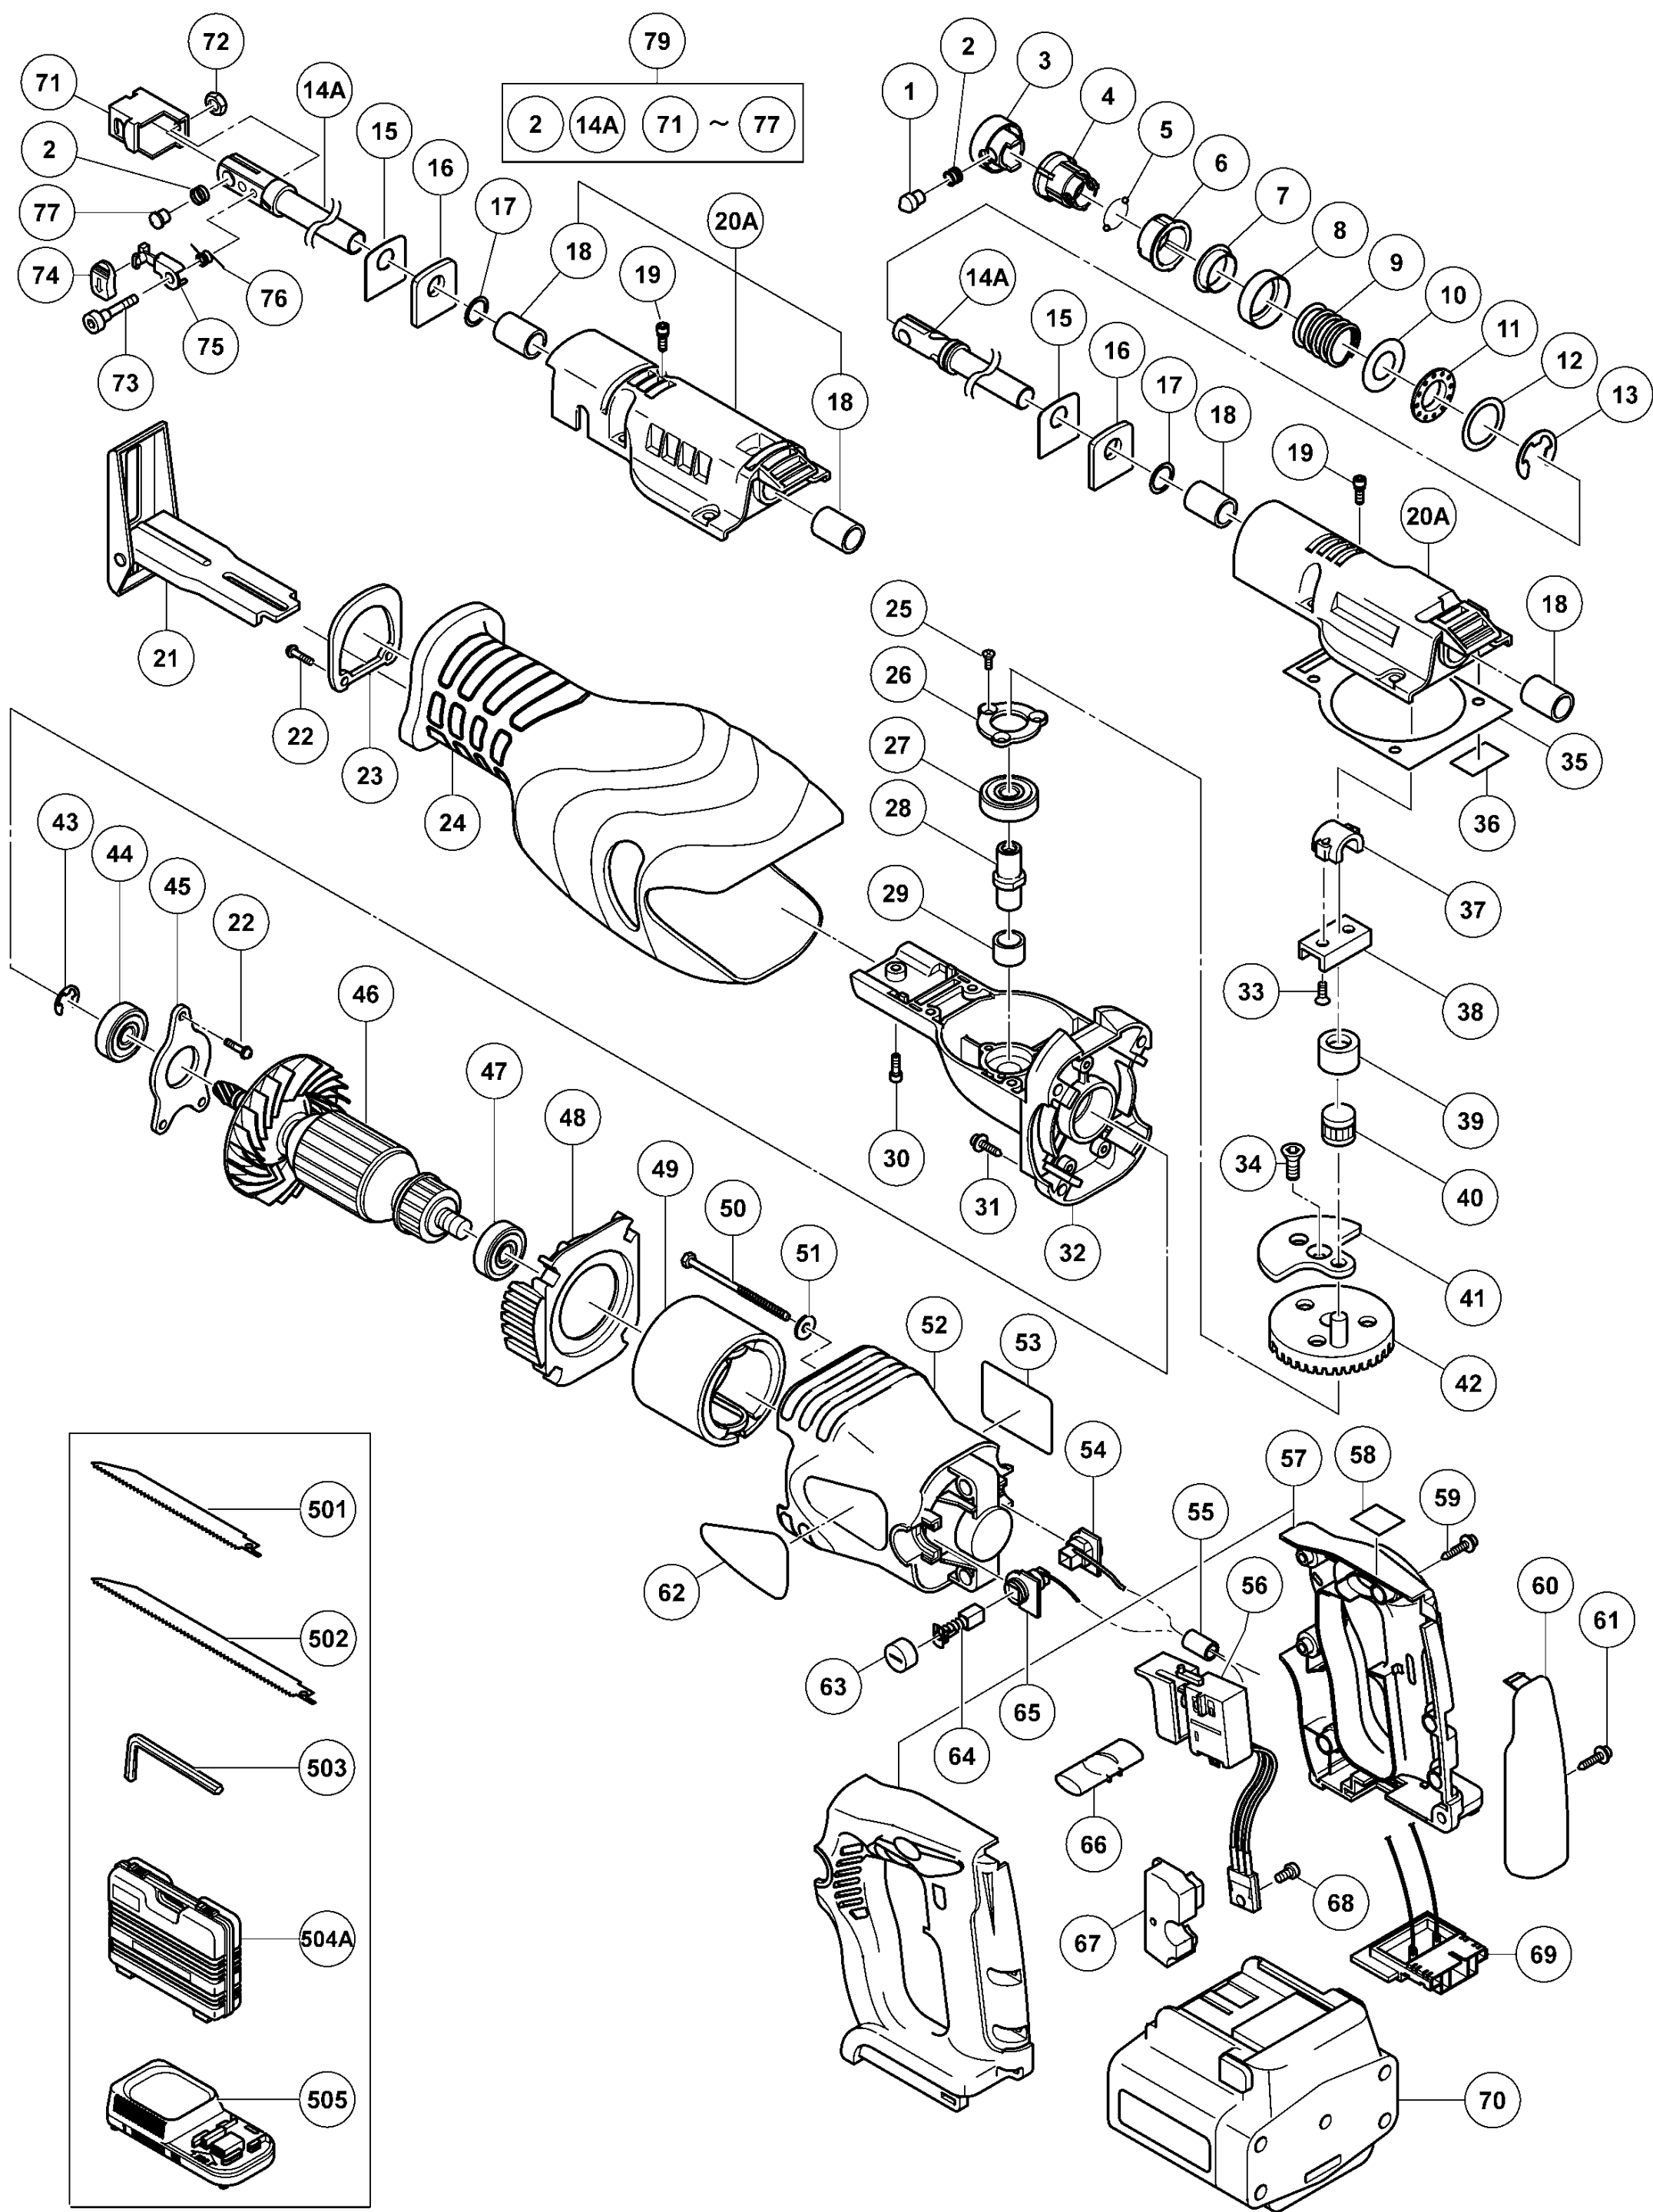

24V CORDLESS SABER SAW CR 24DV

Item No.	Code No.	Description	No. used	Remarks
1	318481	HOLDER PIN	1	(TILL 03.2007)
2	318483	SPRING (B)	1	
3	318478	HOLDER SLEEVE (A)	1	TILL 03.2007
4	318479	HOLDER SLEEVE (B)	1	TILL 03.2007
5	959149	STEEL BALL D4.76 (10 PCS.)	2	TILL 03.2007
6	318480	HOLDER SLEEVE (C)	1	TILL 03.2007
7	318477	GUIDE WASHER	1	(TILL 03.2007)
8	318487	DUST WASHER	1	(TILL 03.2007)
9	318482	SPRING (A)	1	TILL 03.2007
10	318484	WASHER (E)	1	TILL 03.2007
11	318485	THRUST BEARING	1	(TILL 03.2007)
12	318486	WASHER (D)	1	TILL 03.2007
13	318453	RETAINING RING (E-TYPE) FOR D14 SHAFT	1	(TILL 03.2007)
14A	324472	PLUNGER	1	(SINCE 04.2007)
15	996401	PACKING WASHER	1	
16	996400	FELT PACKING	1	
17	996407	O-RING (1AP-12)	1	
18	956589	METAL	2	
19	305574	HEX. SOCKET HD. BOLT (W/SP.WASHER) M5X16	4	
20A	324471	UPPER COVER ASS'Y	1	INCLUD.18
21	319866	BASE	1	
22	951039	MACHINE SCREW (W/SP. WASHER) M4X12	5	
23	319868	COVER PLATE	1	
24	319867	FRONT COVER	1	
25	993244	SEAL LOCK FLAT HD. SCREW M4X12	3	
26	319849	BEARING COVER (B)	1	
27	6901ZZ	BALL BEARING 6901ZZCMPS2L	1	
28	319848	SPINDLE	1	
29	954789	METAL (B)	1	
30	996399	HEX. SOCKET HD. BOLT (W/FLANGE) M5X12	1	
31	986011	TAPPING SCREW (W/SP. WASHER) D5X30	4	
32	319844	GEAR COVER ASS'Y	1	INCLUD.29

Item No.	Code No.	Description	No. used	Remarks
33	319875	SEAL LOCK HEX.SOCKET FLAT HD. BOLT M5X12	2	
34	319851	NYLOCK HEX. SOCKET FLAT HD. BOLT M6X16	1	
35	319856	SEAL PACKING	1	
36	319874	PACKING (B)	1	
37	983567	CONNECTOR HOLDER	1	
38	996405	CONNECTOR	1	
39	983541	CONNECTING PIECE (A)	1	
40	324470	NEEDLE ROLLER	1	
41	319852	BALANCE WEIGHT	1	
42	319850	GEAR	1	
43	670514	RETAINING RING (E-TYPE) FOR D10 SHAFT	1	
44	6001VV	BALL BEARING 6001VVCMP2L	1	
45	319843	BEARING COVER (A)	1	
46	360555	ARMATURE ASS'Y DC 24V	1	INCLUD.43-45,47
47	608VVM	BALL BEARING 608VVC2PS2L	1	
48	319788	FAN GUIDE	1	
49	319846	MAGNET	1	
50	960108	HEX. HD. TAPPING SCREW D4X60	2	
51	319956	WASHER (B)	2	
52	319808	HOUSING	1	
53		NAME PLATE	1	
54	319814	BRUSH HOLDER (B)	1	
55	318247	FERRITE CORE	1	EXCEPT FOR NZL,AUS,USA,CAN
56	319861	DC-SPEED CONTROL SWITCH	1	
57	319855	HANDLE (A).(B) SET	1	
58		CAUTION LABEL	1	
59	305490	TAPPING SCREW (W/FLANGE) D4X30 (BLACK)	4	
60	319790	GRIP COVER	1	
61	304035	TAPPING SCREW (W/FLANGE) D4X25 (BLACK)	2	
62		HITACHI LABEL	1	
63	319847	BRUSH CAP	2	
64	999068	CARBON BRUSH (1 PAIR)	2	
65	319813	BRUSH HOLDER (A)	1	
66	319865	PUSHING BUTTON	1	

Item No.	Code No.	Description	No. used	Remarks
67	319812	HEAT SINK	1	
68	993963	MACHINE SCREW (W/WASHERS) M3X12	1	
69	319894	TERMINAL SUPPORT	1	
*70	319805	BATTERY EB 2420 (AUS,NZL)	1	
*70	319806	BATTERY EB 2420 (USA,CAN)	1	FOR USA,CAN
*70	319807	BATTERY EB 2430HA (EUROPE,AUS,NZL)	1	
71	321132	BLADE HOLDER (A)	1	SINCE 04.2007
72	322709	NUT M4 (BLACK)	1	SINCE 04.2007
73	322134	SPECIAL BOLT M4	1	(SINCE 04.2007)
74	321130	CAP	1	(SINCE 04.2007)
75	321131	LEVER (A)	1	(SINCE 04.2007)
76	321135	SPRING (D)	1	SINCE 04.2007
77	321134	HOLDER PIN (B)	1	SINCE 04.2007
79	329726	PLUNGER SET	1	INCLUD.2,14A,71-77
		STANDARD ACCESSORIES		
501	318613	SABER SAW BLADES NO.103 150L P.14 (5 PCS	1	
502	318621	SABER SAW BLADES NO.132 203L (5 PCS.)	1	FOR USA,CAN
503	944458	HEX. BAR WRENCH 4MM	1	
504A	324313	CASE	1	
505		CHARGER (MODEL UC 24YFB)	1	
		OPTIONAL ACCESSORIES		
601	959610	SABER SAW BLADES NO.1 (5 PCS.)	1	
602	958182	SABER SAW BLADES NO.2 (5 PCS.)	1	
603	958183	SABER SAW BLADES NO.3 (5 PCS.)	1	
604	959611	SABER SAW BLADES NO.4 (5 PCS.)	1	
605	958185	SABER SAW BLADES NO.5 (5 PCS.)	1	
606	958188	SABER SAW BLADES NO.8 (5 PCS.)	1	
607	996427	SABER SAW BLADES NO.9 (3 PCS.)	1	
608	318611	SABER SAW BLADES NO.101 150L P.10 (5 PCS	1	

Item No.	Code No.	Description	No. used	Remarks
609	318612	SABER SAW BLADES NO.102 228L P.10 (5 PCS	1	
610	318614	SABER SAW BLADES NO.104 228L P.14 (5 PCS	1	
611	324818	SABER SAW BLADES NO.109 150L P.18 (5 PCS	1	
612	324819	SABER SAW BLADES NO.110 228L P.18 (5 PCS	1	
613	318617	SABER SAW BLADES NO.107 150L P.24 (5 PCS	1	
614	318618	SABER SAW BLADES NO.108 228L P.24 (5 PCS	1	
615	318619	SABER SAW BLADES NO.121 305L P.6 (5 PCS.	1	
616	318620	SABER SAW BLADES NO.131 305L P.10/14(5PC	1	
617	318621	SABER SAW BLADES NO.132 203L (5 PCS.)	1	